

LUMISKIN™



WATER RESISTANT
IPX7
TECHNOLOGY

CARE GUIDE

Congratulations on the purchase of your new LUMISKIN™ device, you are now well underway to achieving beautiful luminous skin.

USER MANUAL & CARE GUIDE

PRODUCT USAGE – HOW TO OPERATE

AVA

SONIC FACIAL CLEANSER

HANA

COMPACT SONIC BEAUTY DEVICE


KASI

THERMAL CARE SILICONE CLEANSING DEVICE

WARRANTY & RETURNS INFORMATION

Please read the instruction manual carefully before use.

CHARGING YOUR DEVICE

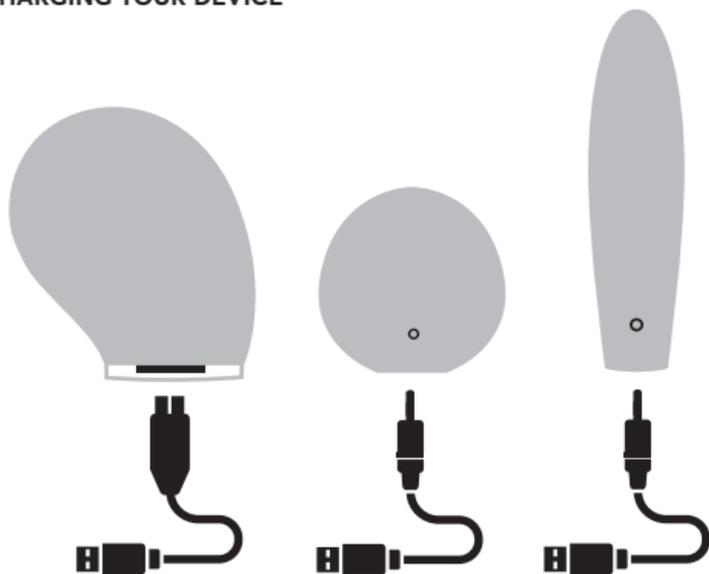

Your LUMISKIN™ device is waterproof and can be used in the bath or shower, however should not be used while on charging mode.

Before using your LUMISKIN™ device, ensure your device is 100% charged. When your device is fully charged the indicator will transmit a still non-flashing light.

CAUTION: Before charging ensure the battery port and cable are free from water & any wet substance, do not use if the battery port is wet. Do not use your device while it is charging. Do not charge your device for more than 12 hours at a time, remove from charging when light remains still. Do not use your device if it is damaged and never charge with any other charging device other than what is supplied at time of purchase.

MAINTENANCE AND SAFETY

CAUTION: Do not use your device with silicone soluble cleanser or cream, alcohol, granular or gritty cleansing cream and exfoliating cream, clay based products, acetone or petrol.

Avoid leaving your device in direct sunlight, near to heat or boiling water.

Do not use the device if you have swelling, or have had surgery, sunburn or other skin problems.

Take off watch, glasses, false eyelashes and contact lenses before using.

Avoid contact with eyes.

Do not use on the same area for more than 1 minute.

Do not use it if silicone damaged.

Do not share the same device.

Do not power it on when charging.

Do not disassemble the device by yourself.

CLEANING

Rinse the device after using, and dry it thoroughly.

Do not immerse the device into water.

STORAGE

Keep it dry and clean.

Keep it away from high temperature.

FOR YOUR SAFETY

Please consult your dermatologist if you suffer from skin conditions. If you have sensitive skin concerns please patch test before use. Avoid direct contact with eyelids and eyes.

Do not use the device on any modes for more than 1 minute at a time.

Exercise care when using around delicate areas such as the eyes, temples and neck. If you experience any discomfort using the LUMISKIN™ device, please discontinue use immediately and consult your physician.

Note: Supervision is necessary if you are using your device around children or infants.

Do not use on children and keep out of reach of children.

This device is not suitable for use by persons with reduced physical, sensory or mental capabilities.


LUMISKIN™ RANGE

AVA SONIC FACIAL CLEANSER

CLEANSING MODE (front side)

Clear away dead skin cells and unclog pores of dirt, oil and makeup residue, while enhancing the skin's natural radiance. Regular cleansing with the LUMISKIN™ 2 in 1 Sonic Facial Cleanser will leave skin looking and feeling cleaner and softer, while preparing it for optimal absorption of creams & serums.

Do not use the device for more than 1 minute. The device will turn off automatically at the end of the 2 minute application period.

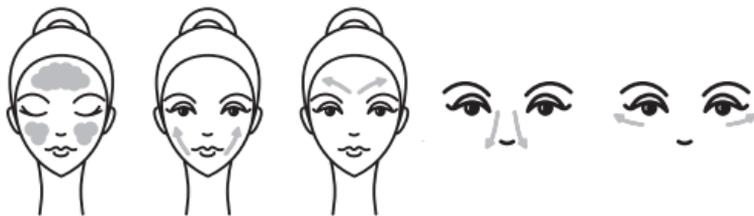

STEP 1: Remove all traces of make-up, dampen your face with water and apply your preferred cleansing solution.

Turn on the device by pressing the centre button once, which activates the Cleansing Mode.


STEP 2: Using the textured side of the device twice daily start by cleansing your chin, moving along the jaw towards the ear using gentle upward strokes, then continue higher to cleanse the whole cheek.

STEP 3: Repeat step 2 on the other side of the face.

STEP 4: Starting from the centre of the forehead, cleanse the entire area with gentle outward strokes to both sides.

STEP 5: Cleanse the nose by gently gliding the device up and down on both sides. It is recommended to reduce the device's pulsation intensity with the "-" button (to the left of the power button) before delicately cleansing the under-eye region using outward strokes.

Rinse the device in warm water and dry with a lint free cloth.

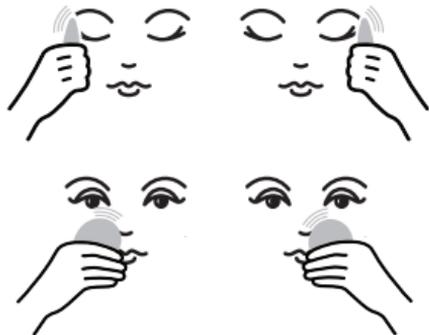

SKIN REFINING MODE (reverse side)

The reverse, lightly ribbed side of the device is designed to gently massage the face and stimulate blood flow and circulation, while reducing the appearance of fine lines and wrinkles by encouraging collagen production.

Spend 12 seconds on each stage of the routine. The device will turn off automatically at the end of the 2 minute application period.

To use, press the centre button to activate the Skin Refining Mode. Close your eyes, relax your face, then place and hold the device on the following wrinkle-prone areas.

STEP 1: Region between the eyebrows

STEP 2: Left temple

STEP 3: Right temple

STEP 4: Left nasolabial fold


STEP 5: Right nasolabial fold

HANA COMPACT SONIC BEAUTY DEVICE

CLEANSING MODE (front side)

Clear away dead skin cells and unclog pores of dirt, oil and makeup residue, while enhancing the skin's natural radiance. Regular cleansing with the LUMISKIN™ 2 in 1 Sonic Beauty Device will leave skin looking and feeling cleaner and softer, while preparing it for optimal absorption of creams & serums.

Do not use the device for more than 1 minute. The device will turn off automatically at the end of the 2 minute application period.

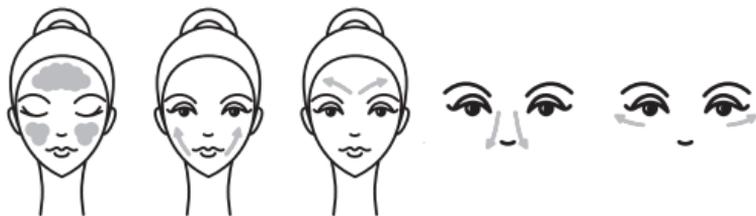

STEP 1: Remove all traces of make-up, dampen your face with water and apply your preferred cleansing solution

Hold the on/off button for 1 second to switch on/off the device.

There are three speeds. Press the on/off button to change the speed.


STEP 2: Using the textured side of the device twice daily start by cleansing your chin, moving along the jaw towards the ear using gentle upward strokes, then continue higher to cleanse the whole cheek.

STEP 3: Repeat Step 2 on the other side of the face.

STEP 4: Starting from the centre of the forehead, cleanse the entire area with gentle outward strokes to both sides.

STEP 5: Cleanse the nose by gently gliding the device up and down on both sides. It is recommended to reduce the device's pulsation intensity with the '-' button (to the left of the power button) before delicately cleansing the under-eye region using outward strokes.

Rinse the device in warm water and dry with a lint free cloth.

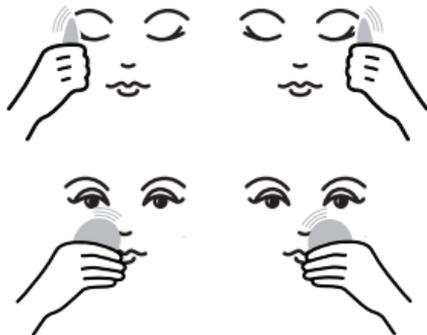

SKIN REFINING MODE (reverse side)

The reverse, lightly ribbed side of the device is designed to gently massage the face and stimulate blood flow and circulation, while reducing the appearance of fine lines and wrinkles by encouraging collagen production.

Spend 12 seconds on each stage of the routine. The device will turn off automatically at the end of the 2 minute application period.

To use, press the centre button to activate the Skin Refining Mode. Close your eyes, relax your face, then place and hold the device on the following wrinkle-prone areas.

STEP 1: Region between the eyebrows

STEP 2: Right temple

STEP 3: Right nasolabial fold

STEP 4: Left nasolabial fold

STEP 5: Left temple

KASI THERMAL CARE SILICONE CLEANSING DEVICE

The sonic facial brush with thermal spa function has unique fingertip shape design to fit the face contours perfectly and makes T-zone cleaning easily. Its soft silicone touch points working under 2 care modes to bring you an effective and gentle face care result.

Do not use the device for more than 1 minute.

FUNCTION GUIDE

STATUS	INDICATORS
Vibration with heat mode	Yellow indicator, device off automatically after 5 minutes
CVT mode	Continuously variable transmission, white indicator, device off automatically after 5 minutes
Battery <30%	Indicator (yellow or white) twinkles
Battery <10%	Device turn off automatically, indicator off
In Charging	Yellow indicator twinkles
Full Charged	White indicator on

CLEANSING MODE (front side)

Vibration with heat mode: With high frequency vibration, skin friendly grade silicone helps pores open quickly and clean your face effectively.



STEP 1: Remove all traces of make-up, dampen your face with water and apply your preferred cleansing solution.

Turn on the device into "vibration cleans + heat" mode. Generate foam on your hand or face.

STEP 2: Using twice daily start by cleansing your chin, moving along the jaw towards the ear using gentle upward strokes, then continue higher to cleanse the whole cheek.

STEP 3: Repeat step 2 on the other side of the face.

STEP 4: Starting from the centre of the forehead,

cleanse the entire area with gentle outward strokes to both sides.

STEP 5: Cleanse the nose by gently gliding the device up and down on both sides. It is recommended to reduce the device's pulsation intensity with the '-' button (to the left of the power button) before delicately cleansing the under-eye region using outward strokes.

Rinse the device in warm water and dry with a lint free cloth.


T-ZONE DEEP CLEAN



Step 1: Press 'ON' button to activate CVT mode and move on to T-Zone area starting at chin.

Step 2: Move up to the area on nose and move up between eyes and across the forehead.

CVT mode: Continuously Variable Transmission. The vibration shifts from strong to weak in seconds. The curved brush head is easy for T-zone care, effectively removes stubborn build up and dirt.

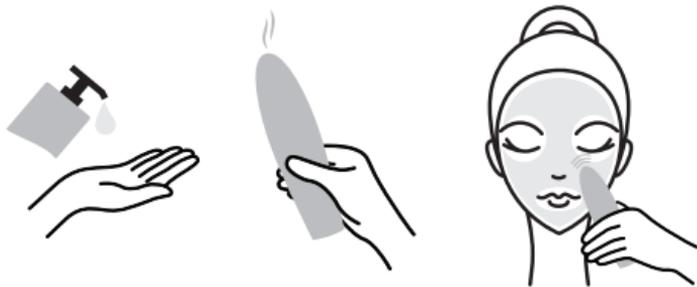

THERMAL MASSAGE / SKIN REFINING MODE (reverse side)

Vibration with heat mode: Use touch points on back side massage your skin, with heat prompt absorption of skin care products to lift and firm your face.

The reverse, lightly ribbed side of the device is designed to gently massage the face and stimulate blood flow and circulation, while reducing the appearance of fine lines and wrinkles by encouraging collagen production.

LUMISKIN™

Made in China

LUMISKIN™ is a registered trademark of Polished Brands

Suite 8, 11 Beach Street, Port Melbourne VIC 3207

lumiskin.com.au

WARRANTY TERMS AND CONDITIONS

Your LUMISKIN™ device comes with a 1 year manufacture warranty. Please retain your proof of purchase. Should you experience any issues with your device please take it back to the place of purchase for a replacement or refund.